

```
*
* C:\Dokumente und Einstellungen\Windows-
* enutzer\Anwendungsdaten\AVM\FRITZ!Fernzugang\avmvpn_dyndns_org\fritzbox.cfg
* Fri Nov 07 12:43:48 2008
*/
```

```
pncfg {
  connections {
    enabled = yes;
    conn_type = conntype_lan;
    name = "draytektest.dd-dns.de"; | Name der Verbindung
    always_renew = no;
    reject_not_encrypted = no;
    dont_filter_netbios = yes;
    localip = 0.0.0.0;
    local_virtualip = 0.0.0.0;
    remoteip = 0.0.0.0;
    remote_virtualip = 0.0.0.0;
    remotehostname = "draytektest.dd-dns.de"; | Dynamic DNS-Name des Draytek-Routers
    localid {
      fqdn = "avmvpn.dyndns.org";
    }
    remoteid {
      fqdn = "draytektest.dd-dns.de";
    }
    mode = phasel_mode_aggressive;
    phaselss = "all/all/all";
    keytype = connkeytype_pre_shared;
    key = "VPN-Kennwort"; | Pre-Shared Key
    cert_do_server_auth = no;
    use_nat_t = no;
    use_xauth = no;
    use_cfgmode = no;
    phase2localid {
      ipnet {
        ipaddr = 192.168.100.0;
        mask = 255.255.255.0;
      }
    }
    phase2ss = "esp-all-all/ah-all/comp-all/pfs";
    accesslist = "permit ip any 192.168.150.0 255.255.255.0";
  }
  ike_forward_rules = "udp 0.0.0.0:500 0.0.0.0:500",
    "udp 0.0.0.0:4500 0.0.0.0:4500";
}
```

```
/ EOF
```